


# Reverse Osmosis Installation Instructions

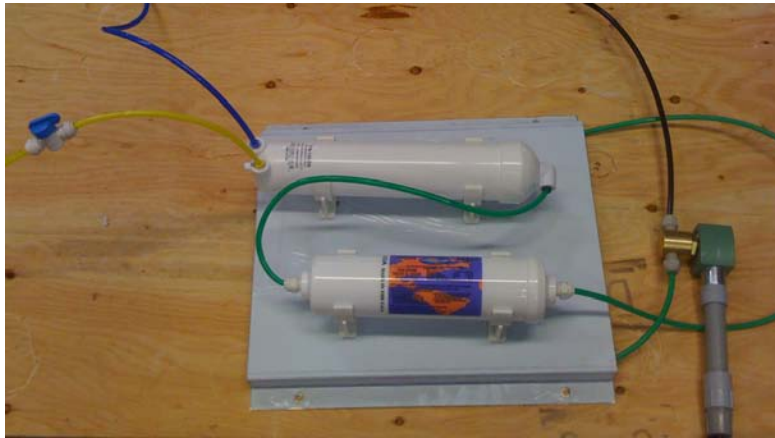

1. Mount backing plate and solenoid close to the water source.
2. Connect blue tube to the Membrane cartridge in the blue connection point. This tube will go to the water feature.
3. Connect yellow tube to the Membrane cartridge in the yellow connection point. This tube will go to the drain. You will need to attach the water control valve to this line.
4. Connect green tube to the Chlorine Reducer cartridge. This tube will connect to the solenoid.
5. Connect the other end of the green tube to the solenoid.
6. Connect water supply line to solenoid (shown as black tubing in this example).
7. Plug solenoid into the timer and turn on water.
8. The length of time the system will need to run will depend on how much water is exhausted off.



1. Mount assembled RO and solenoid close to the water source.
2. Insert Membrane cartridge into chamber at the top of the unit
3. The blue tube will go to the water feature.
4. The yellow tube will go to the drain.
5. Connect green tube to the Membrane cartridge. This tube will connect to the solenoid.
5. Connect the other end of the green tube to the solenoid.
6. Connect water supply line to solenoid (shown as black tubing in this example).
7. Plug solenoid into the timer and turn on water.
8. The length of time the system will need to run will depend on how much water is exhausted off.